

# ROTOR WING PMA PARTS LIST

OEM	MODEL APPLICABILITY	OEM P/N	ABLE P/N	DESCRIPTION
AIRBUS	AS-350	704A39812004	77044-1	MAG SEAL, TR GEARBOX
BELL	206L4	20546	20546AA	SHAFT
BELL	CH-146, UH-1, UH-1N, UH-1Y 206B, L, L1, L3, L4	80631	080631AA	WEAR SLEEVE
BELL	OH-58D, 407	099380	099380AA	WEAR SLEEVE
BELL	206 SERIES	529052	529052AA	SEAL
BELL	412	536841	536841AA	SLEEVE
BELL	206A, B, B3,L, L1, L3	9440904	9440904AA	DISC
BELL	206A/B ,L, OH, TH	047-641-175-001	047-641-175-001AA	RACE, TR
BELL	407	140-007-28T24E6	140-007-28T24E6AA	WASHER
BELL	407	20-065-07074CA	20-065-07074CAAA	BOLT
BELL	407, 427	20-065H06010CA	20-065H06010CAAA	BOLT (SHEAR BEARING)
BELL	214ST, 206L4, 407	204-010-428-001	2AA-010-428-001	SEAL
BELL	204B, 205A, 212, UH	204-010-441-003	2AA-010-441-003	RACE
BELL	204B, 204A, 212, CH, UH	204-011-131-107	2AA-011-131-107	SEAL
BELL	204B, 205A, 212	204-011-132-001	2AA-011-132-001	SEAL
BELL	204B, 205A1, 212, 412, UH	204-011-430-001	204-011-430-001	SWASHPLATE BEARING
BELL	204, 205A1, 212, 412 205A/B, 206L, 407	204-040-132-001	2AA-040-132-001	RACE
BELL	204B, 205A1, 212, 412 206A/B	204-040-725-003	2AA-040-725-003	ROLLER BEARING SET
BELL	206 SERIES	206-010-111-105	2AA-010-111-105	ADJUSTING SCREW
BELL	206A, 206B	206-010-245-101	2AA-010-245-101	SLEEVE
BELL	206 SERIES, 407	206-010-408-001	ABLE-2844-001	PIVOT PIN, SWASHPLATE
BELL	206 SERIES	206-010-795-101	2AA-010-795-101	PITCH LINK ASSY
BELL	206B, L3, L4	206-010-795-105	2AA-010-795-105	PITCH LINK ASSY
BELL	206 SERIES	206-011-102-119	2AA-011-102-119	PILLOW BLOCK ASSY
BELL	206 SERIES	206-011-102-121	2AA-011-102-121	PAD
BELL	206 SERIES	206-011-102-123	2AA-011-102-123	PAD
BELL	206 SERIES	206-011-111-001	2AA-011-111-001	BEARING
BELL	206 SERIES	206-011-111-003	2AA-011-111-003	RACE
BELL	206 SERIES	206-011-115-001	2AA-011-115-001	CLOSURE
BELL	206 SERIES	206-011-118-001	2AA-011-118-001	YOKE BEARING
BELL	206 SERIES	206-011-119-005	2AA-011-119-005	NUT
BELL	206 SERIES	206-011-119-101	2AA-011-119-101	NUT
BELL	206 SERIES	206-011-124-005S	2AA-011-124-005	PLATE
BELL	206A, B, B1, L, L1, L3, L4	206-011-125-001	2AA-011-125-001	PIN ASSY
BELL	206A, B, B-1	206-011-125-105	2AA-011-125-105	PIN ASSY
BELL	206 SERIES	206-011-128-103	2AA-011-128-103	BLUE COAT BUSHING
BELL	206-A, B, B3, L, L1, L3	206-011-129-003	2AA-011-129-003	RETAINER
BELL	206B, 206L, L1, L3, L4	206-011-130-003	2AA-011-130-003	RETAINER ASSEMBLY
BELL	206	206-011-132-113A	2AA-011-132-113A	MAIN ROTOR GRIP
BELL	206 SERIES	206-011-134-001	2AA-011-134-001	BUFFER PAD
BELL	206 SERIES	206-011-150-105	2AA-011-150-105	FITTING ASSY
BELL	206A, B, L, L1, L3, L4, OH-58 TH-57A, 57B, C, D, TH-67	206-011-156-101	2AA-011-156-101	WEAR DISK
BELL	206 SERIES	206-011-260-101	2AA-011-260-101	LATCH BOLT
BELL	206A/B	206-011-260-103	2AA-011-260-103	LATCH BOLT
BELL	206 SERIES	206-011-727-001	2AA-011-727-001	BUSHING, TR
BELL	206 SERIES, 407	206-011-727-003	2AA-011-727-003	BUSHING, TR
BELL	206 SERIES	206-011-732-001	2AA-011-732-001	SLEEVE, PC TUBE TR
BELL	206L4, 407	206-011-732-103	2AA-011-732-103	SLEEVE TR
BELL	206A/B	206-031-509-103	2AA-031-509-103	DRAG PIN ASSY
BELL	206A/B	206-031-513-101	2AA-031-513-101	BUSHING
BELL	206L, L1, L3, L4	206-033-517-007	2AA-033-517-007	JOURNAL BEARING
BELL	206A, B, 222, 230	206-040-031-001	2AA-040-031-001	BEARING
BELL	206A, B, B1, L, L1, L3, L4	206-040-032-105	2AA-040-032-105	TRANSMISSION DUPLEX BEARING
BELL	206A, B, L, L1, L3	206-040-048-101	ABLE-0033-101	INPUT PINION ADAPTER
BELL	206A/B	206-040-061-001	ABLE-0734-001	LINER
BELL	206B, L, L1, L3, L4	206-040-062-003	2AA-040-062-003	PLATE

OEM	MODEL APPLICABILITY	OEM P/N	ABLE P/N	DESCRIPTION
BELL	206B-L4	206-040-156-001	76022-1	SEAL
BELL	206B-L3	206-040-156-101	81015-1	SEAL
BELL	206A, B, B3, L, L1, L3	206-040-203-003	ABLE-0104-003	ADAPTER
BELL	206 SERIES	206-040-205-105	2AA-040-205-105	BEARING
BELL	206 SERIES	206-040-272-101	2AA-040-272-101	SEAL ASSY
BELL	206 SERIES	206-040-320-103	2AA-040-320-103	OIL COOLER BLOWER SHAFT
BELL	206 SERIES	206-040-420-101	ABLE-2848-101	SPACER
BELL	206 SERIES	206-040-439-001	2AA-040-439-001	TR OUTPUT SHAFT
BELL	206L, L1, L3	206-040-537-001	2AA-040-537-001	LINER
BELL	206 SERIES	206-062-101-101	206-062-101-101AA	FWD ENGINE LEG ASSY
BELL	206 SERIES	206-062-101-102	206-062-101-102AA	FWD ENGINE LEG ASSY
BELL	206	206-076-132-001	2AA-076-132-001	SLEEVE
BELL	206A-B	206-310-004-101	2AA-310-004-101	STRAP ASSY, 48 MONTH-SMALL HEAD
BELL	206B, L, L1, L3, L4	206-310-004-103	2AA-310-004-103	STRAP ASSY, 48 MONTH-BIG HEAD
BELL	206 SERIES, 407	206-310-700-101	2AA-310-700-101	TR SEAL
BELL	206 SERIES	206-340-104-101	2AA-340-104-101	SEAL
BELL	206 SERIES	206-340-204-101	2AA-340-204-101	SEAL
BELL	206 SERIES	206-340-206-101	2AA-340-206-101	SEAL
BELL	206A, B, B1, L, L1, L3, L4	206-340-301-101	2AA-340-301-101	ROTOR BRAKE DISC
BELL	412, 427	206-340-401-101	2AA-340-401-101	SLEEVE
BELL	206A, L, 214ST, 407, OH-58, TH-57A, 57B, C, D, TH-67	209-340-265-103	2AA-340-265-103	SEAL
BELL	212	212-010-121-101	2AA-010-121-101	BUFFER PAD
BELL	212, 412, EP	212-040-176-101	2AA-040-176-101	OIL BOOT
BELL	204B, 205A1, 212	212-311-007-101	2AA-311-007-101	BEARING, BELL MEDIUM YOKE
BELL	204B, 205A1, 212	212-311-008-101	2AA-311-008-101	BEARING, BELL MEDIUM YOKE
BELL	204B, 205A1, 212	212-340-113-101	2AA-340-113-101	SEAL
BELL	407, OH-58D	214-040-814-105	2AA-040-814-105	OIL SEAL WEAR SLEEVE
BELL	204B, 205A1, 214B	214-040-867-101	ABLE-2747-101	SLEEVE
BELL	206L, L1, L3	35-79501-1093-2	ABLE-0182-1093-2	SHAFT
BELL	206L4, 407 SERIES	35-79501-1145-2	ABLE-0182-1145-2	SHAFT
BELL	206A, A-1, B, B-1	35-79501-2005-3	ABLE-0182-2005-3	SHAFT
BELL	206A, B, L, L1, L3, L4, 407, 427	38-79004-1045-2	38-79004-1045-2AA	SEAL
BELL	407	406-010-108-131	4AA-010-108-131	MAIN ROTOR GRIP
BELL	OH-58	406-010-108-131	4AA-010-108-139	MAIN ROTOR GRIP
BELL	407	406-010-115-127	406-010-115-127	PLATE ASSY, UPPER
BELL	407	406-010-117-125	406-010-117-125	PLATE ASSY, LOWER
BELL	407, 427	406-010-121-101	4AA-010-121-101	PLUG
BELL	407, 427	406-010-123-101	4AA-010-123-101	LOCK, DROP STOP
BELL	407, 427	406-010-123-103	4AA-010-123-103	LOCK, DROP STOP
BELL	407	406-010-421-103	4AA-010-421-103	SPACER
BELL	407	406-010-422-107	4AA-010-422-107	ROTATIONAL CONTROLS BUSHING
BELL	407	406-010-429-101	4AA-010-429-101	SWASHPLATE DRIVE PIN
BELL	407, OH-58D	406-010-457-105	4AA-010-457-105	BUSHING
BELL	407, 427	406-010-458-101	4AA-010-458-101	SPACER
BELL	407	406-012-104-103	4AA-012-104-103	PLATE, DRIVER CONTROL
BELL	407	406-310-402-103	4AA-310-402-103	SWASHPLATE DUPLEX BEARING
BELL	407	406-310-406-103	4AA-310-406-103	BUSHING
BELL	407	406-310-407-101	4AA-310-407-101	SEAL
BELL	407	406-310-410-101	4AA-310-410-101	SLIDER BEARING
BELL	206L4, 407,427	406-312-103-101	4AA-312-103-101	TR PITCH LINK ASSY
BELL	206A, B, L, L1, L3	406-340-104-101	4AA-340-104-101	SEAL
BELL	206 SERIES, 407	406-340-105-101	4AA-340-105-101	SEAL
BELL	205A1, 212, 412, EP, 427	406-340-105-103	4AA-340-105-103	SEAL
BELL	407	407-010-105-103	4AA-010-105-103	STUD FOR DROOP STOP
BELL	407	407-010-120-101	4AA-010-120-101	PIN
BELL	407	407-010-206-103	4AA-010-206-103	SPRING ASSY
BELL	407	407-040-320-103	4AA-040-320-103	TR FAN SHAFT/OIL COOLER BLOWER
BELL	407	407-040-416-103	4AA-040-416-103	TR OUTPUT SHAFT
BELL	407	407-310-203-101	4AA-310-203-101	CORNER MOUNT
BELL	206L4, 407	407-312-100-101	4AA-312-100-101	TR FLAPPING BEARING
BELL	407	407-340-003-101	4AA-340-003-101	INPUT SEAL
BELL	407	407-340-004-101	4AA-340-004-101	WEAR SLEEVE
BELL	407	407-340-005-101	4AA-340-005-101	SEAL
BELL	407	407-340-032-101	4AA-340-032-101	DUPLEX BEARING
BELL	206L4, 407	407-340-102-101	4AA-340-102-101	SEAL
BELL	407	407-340-106-101	4AA-340-106-101	WEAR SLEEVE

OEM	MODEL APPLICABILITY	OEM P/N	ABLE P/N	DESCRIPTION
BELL	407	407-340-107-101	4AA-340-107-101	INPUT SHAFT
BELL	407	407-340-108-101	4AA-340-108-101	ADAPTER
BELL	407	407-340-109-101	4AA-340-109-101	RETAINING RING
BELL	407	407-340-318-101	4AA-340-318-101	ROTOR BRAKE DISC
BELL	412, CH-146	412-010-106-101	4AA-010-106-101	PIVOT BEARING
BELL	412	412-010-118-101	4AA-010-118-101	PIN
BELL	212/412	412-040-111-105	81109-2	TRANS, INPUT QUILL
BELL	412, CH-146	412-340-100-101	4AA-340-100-101	SEAL
BELL	412	412-340-102-101	4RP-340-102-101	BOOT
BELL	407, 427	427-342-412-101	4AA-342-412-101	INPUT SEAL
BELL	407, 427	427-342-415-101	4AA-342-415-101	SLEEVE
BELL	206A, B, B1, L, L1, L3, L4	206-340-301-101	D0143-1	L4 DISC
BELL	407	407-340-302-103	B0223-4	CALIPER ASSY 407
BELL	407	407-340-318-101	D0162-1	407 DISC
BELL	429	427-340-352-111	B0238-1	CALIPER ASSY
BELL	429	427-340-352-112	B0238-2	CALIPER ASSY
BELL	407	427-340-352-113	B0244-1	CALIPER ASSY
BELL	206 SERIES, 407	535639-10	535639AA-10	SEAL - TR
BELL	205A, B, 212, 412, 214B, ST	9440791-1	9440791-1AA	DISC
BELL	206L	B0223-KA	B0223-KA	OVERHAUL KIT, ROTOR BRAKE (206L) FOR TWO CALIPER ASSYS
BELL	407	B0223-KB	B0223-KB	OVERHAUL KIT, ROTOR BRAKE (407) FOR ONE CALIPER ASSY
BELL	407	B0223-MOD-4	B0223-MOD-4	CALIPER MOD KIT
BELL	429	B0238-K	B0238-K	OVERHAUL KIT
BELL	407, 427	B0244-K	B0244-K	OVERHAUL KIT
BELL	206L	D0134-5	D0134-5	HOUSING
BELL	206L, 407	D0134-6	D0134-6	HOUSING
BELL	407	D0134-9	D0134-9	HOUSING ASSY
BELL	206L, 407	D0135-1	D0135-1	PISTON
BELL	206L, 407	D0136-2	D0136-2	SEAT
BELL	407	D0136-3	D0136-3	FWD SEAT 407
BELL	407	D0137-1	D0137-1	PLUG
BELL	206L	D0139-1	D0139-1	TUBE TRANSFER
BELL	206L, 407	D0141-1	D0141-1	ROD
BELL	206L, 407	D0142-1	D0142-1	SPRING
BELL	206L, 407	D0151-1	D0151-1	VALVE
BELL	206L, 407	D0151-2	D0151-2	VALVE
BELL	407, 427	D0159-1	D0159-1	TUBE TRANSFER
BELL	206L	D0166-1	D0166-1	BOLT
BELL	206L	D0168-1	D0168-1	WASHER
BELL	407	D0168-2	D0168-2	WASHER
BELL	407	D0189-2	D0189-2	STANDPIPE
BELL	407	D0290-2	D0290-2	FRICTION PAD
BELL	407	D0292-1	D0292-1	BOLT
BELL	407	D0294-1	D0294-1	BRACKET ASSY
BELL	407, 427	D0296-1	D0296-1	BRACKET ASSY
BELL	407, 427	D0301-1	D0301-1	PISTON ASSY
BELL	407, 427	D0303-1	D0303-1	FRICTION PAD
BELL	407, 427	D0307-1	D0307-1	PIN
BELL	407, 427	D0311-1	D0311-1	HOUSING ASSY
BELL	407, 427	D0312-1	D0312-1	HOUSING ASSY
BELL	206L	D0314-1	D0314-1	FRICTION PAD
BELL	429	D0413-1	D0413-1	SWITCH
BELL	206 SERIES	EB9025-14	AA9025-14	NUT
BELL	206B, L, L1, L3, L4 BIG HUB	S30769	S30769AA	EXCLUDER
BELL	407, 427	TF005-012	TF005-012	SCRAPER ASSY
LEONARDO	PT6C-67C, AW139	3057362-01	3057362-01AA	SEAL
LEONARDO	129139	3G6230A01852	3G6230A01852AA	BUSHING
LEONARDO	109139	3G6230A03752	3G6230A03752AA	SLEEVE
LEONARDO	139	3G6430A01851	3G6430A01851AA	LOCK WASHER
LEONARDO	139	AW005BR095-C	AW005BR095-CAA	TORQUE TUBE ASSY BUSHING
SIKORSKY	S-76A, S-76B, S-76C	76107-08002-113	ABLE-2819-113	BUSHING
SIKORSKY	S-76B, S-76C	76107-08006-153	761AA-08006-153	PIN
SIKORSKY	S-76B, S-76C	76107-08006-154	761AA-08006-154	PIN

OEM	MODEL APPLICABILITY	OEM P/N	ABLE P/N	DESCRIPTION
SIKORSKY	S-76A, S-76B, S-76C	76107-08007-103	ABLE-2820-103	WASHER
SIKORSKY	S-76A	76351-09023-101	76351-09023-101AA	LINER
SIKORSKY	S-76A, S-76B, S-76C	SB8002-103	SB8002-103AA	SEAL
WOODWARD	206L, L1, L3, L4, 407	67561	67561AA	DRIVE SHAFT
WOODWARD	205A-1, 212, 412	41000564	41000564AA	HOUSING
WOODWARD	206A, 206B	41000898	41000898AA	CYLINDER
WOODWARD	205A-1, 212, 412	41003203	41003203AA	UPPER HOUSING
WOODWARD	205A-1, 212, 412	41004577	41004577AA	CYLINDER
WOODWARD	205A-1, 212, 412	41004683	41004683AA	LOWER CYLINDER
WOODWARD	205A-1, 212, 412	41004687	41004687AA	CYLINDER
WOODWARD	205A-1, 212, 412	41005826	41005826AA	BOLT
WOODWARD	206A, 206B	41006472	41006472AA	CYLINDER
WOODWARD	206L, L1, L3, L4, 407, 427	41015396	41015396AA	TAB WASHER
WOODWARD	206L, L1, L3, L4, 407, 427	41015397	41015397AA	SLOTTED LOCK NUT
WOODWARD	407, 427	407-340-107-101	4AA-340-107-101	SHAFT
WOODWARD	206L, L1, L3, L4, 407, 427	407-340-108-101	4AA-340-108-101	ADAPTER
WOODWARD	206L, L1, L3, L4, 407	41009473-102	41009473-102AA	OUTPUT ASSY
WOODWARD	407, 427	41009491-101	41009491-101AA	ACTUATOR HOUSING
WOODWARD	407, 427	41009491-103	41009491-103AA	ACTUATOR HOUSING
WOODWARD	407, 427	41009852-102	41009852-102AA	OUTPUT ASSY
WOODWARD	206L, L1, L3, L4, 407, 427	41015395-101	41015395-101AA	CLEVIS

# Contact Us

P: 602.304.1227

W: [www.ableaerospace.com](http://www.ableaerospace.com)

E: [insidesales@ableaerospace.com](mailto:insidesales@ableaerospace.com)

